

dual screen


User Manual  
Manuel Utilisateur  
Bedienungsanleitung  
Manual de Uso  
Manuale Operativo  
Manual de Utilizador




## 1. Installation

### 1.1. Connection to the blocker with IP address

While on the initial frame / shape plotting screen. Place two fingers at the top of the multitouch display and move vertically down. This will provide access to the technical menus of the blocker.

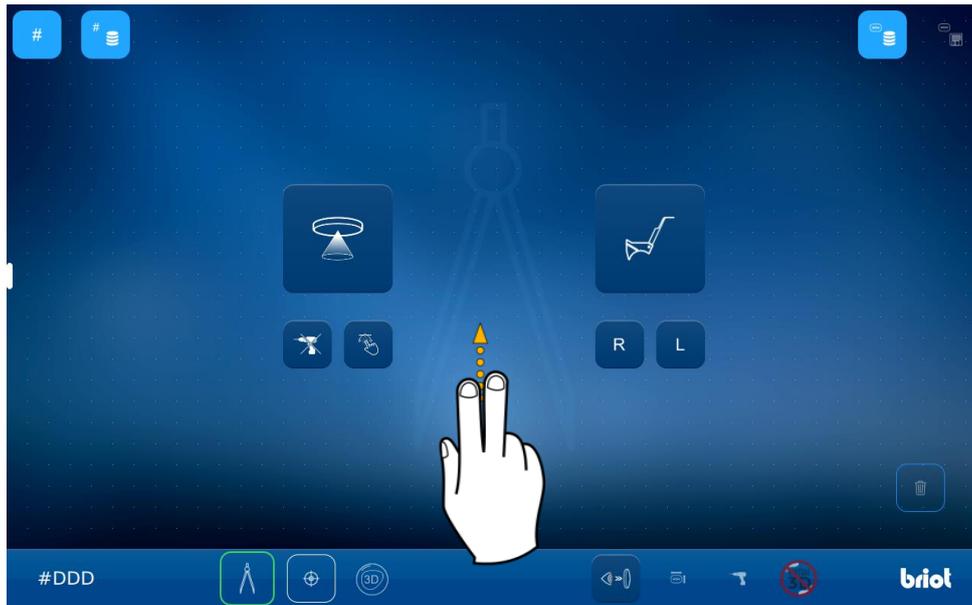

The cog icon to access the menus.

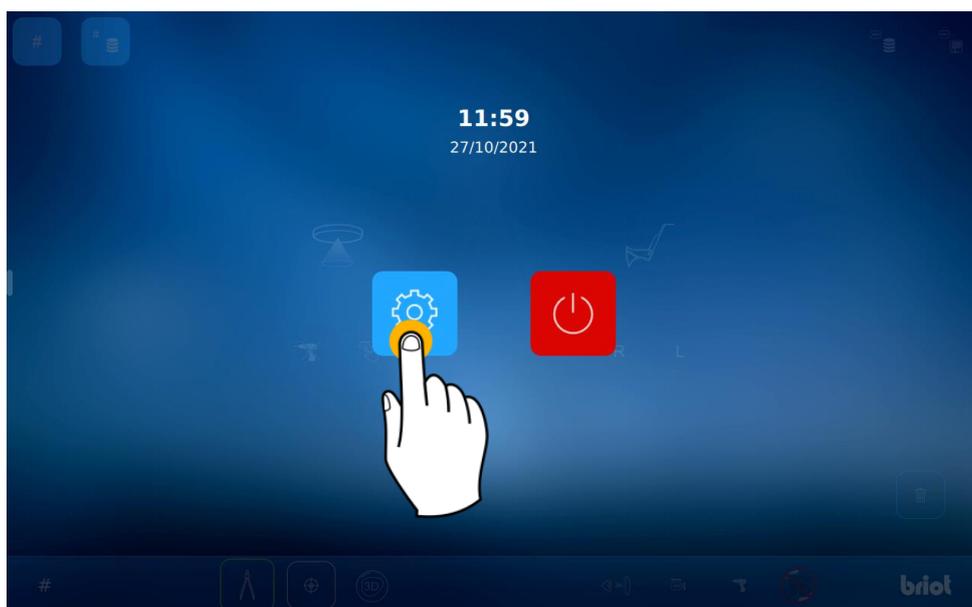


To access the info menu, scroll the screen four times, to the left (1).



You can also access a screen containing the machine's settings by pinching the screen (2).




Then, on the info screen, you can read the blocker's IP address.

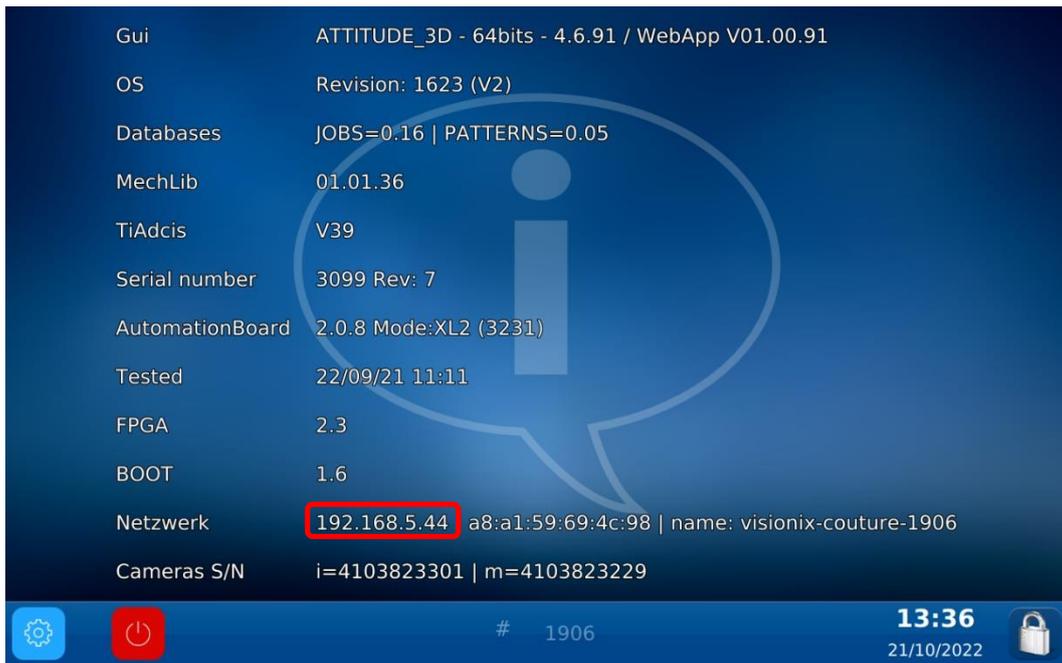

## 2. Use

Use a web browser and tap the IP address in the search bar (the blocker and the device used must be connected on the same network).

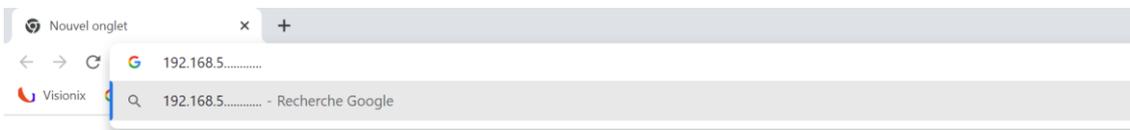


You access to the next page. With the correct IP address, you will see the welcome screen.




Now click "enter". To access to the jobs page.

## DUAL SCREEN... User manual


The last 7 jobs are displayed. You select one and click "next".

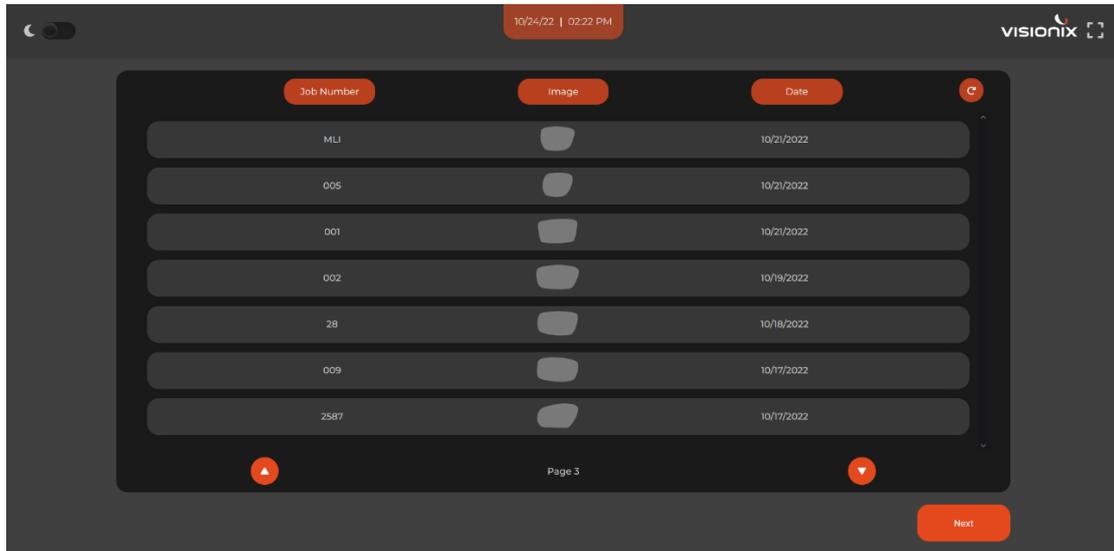

On the frame parameters screen, you have the option to change the characteristics of the lens in question. Clicking "next" will start the frame calculations.

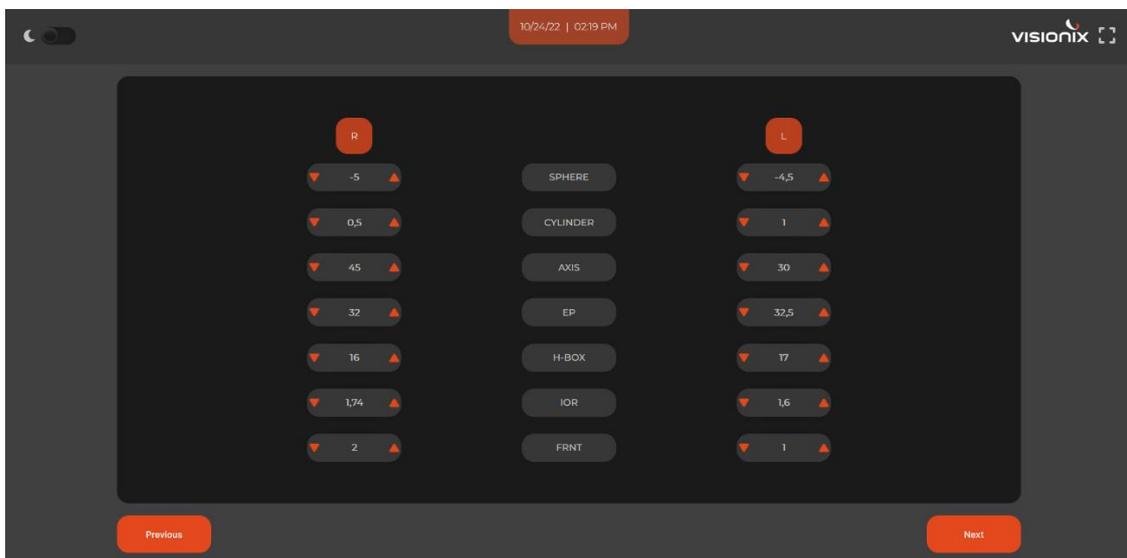

The next page, will display the frame with different lenses: ALWAYS CR39 1.5 index at the bottom and chosen index on top. By clicking  you can display the frame in full screen. By clicking  you can show/hide the frame.

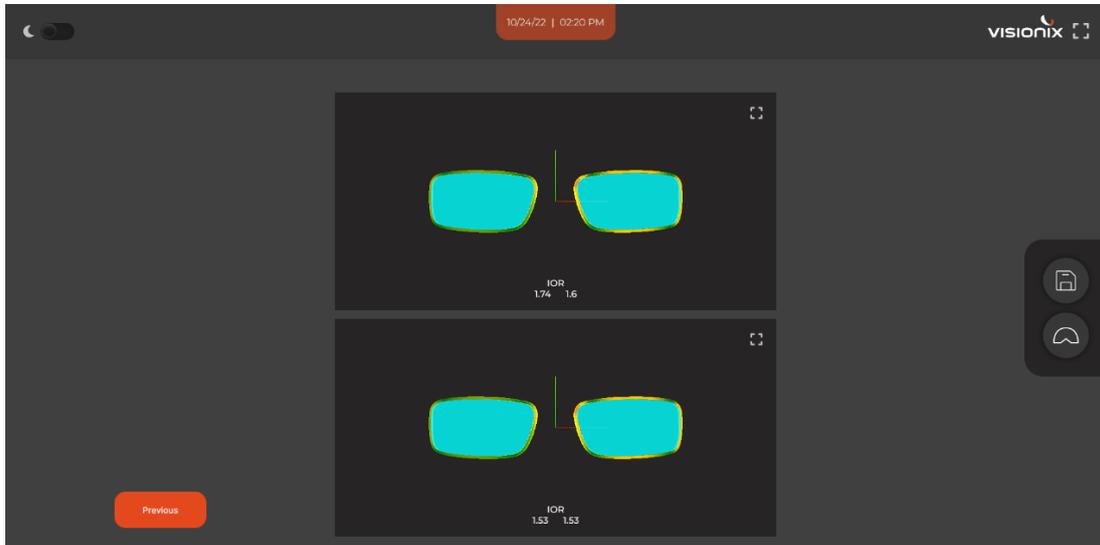

For navigation, do as follows:



Rotate the frame



Move the frame



Zoom in/out

